

Dishwashers

A:
Product drying performance, measured from A+++ to D / G depending on the product family

A+:
Energy efficiency class A+ helps to save up to 10% energy compared to class A. Maximum performance with minimum consumption is guaranteed.

A++:
Energy efficiency class A++ helps to save up to 20% energy compared to class A. Maximum performance with minimum consumption is guaranteed.

A+++:
Appliances with this symbol can reduce energy consumption by a further 30% from the standard A energy rating.

Child lock:
some models are fitted with a device to lock the programme/cycle so it cannot be accidentally changed.

7 plate settings:
The symbols show the number of plate settings of the dishwasher.

10 plate settings:
The symbols show the number of plate settings of the dishwasher.

12 plate settings:
The symbols show the number of plate settings of the dishwasher.

13 plate settings:
The symbols show the number of plate settings of the dishwasher.

14 place settings:
The symbols show the number of plate settings of the dishwasher.

WATERSAVE:
8,5 lt System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.

WATERSAVE:
9 lt System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.

WATERSAVE:
9,5 lt System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.

WATERSAVE:
9,8 lt System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.

WATERSAVE:
10 lt System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.

WATERSAVE:
10,5 lt System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.

WATERSAVE:
11 lt System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.

WATERSAVE:
11,5 lt System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.

WATERSAVE:
12 lt System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.

Noise Level:
39 dB Excellent insulation and special devices keep noise to a minimum.

**Noise Level:**

Excellent insulation and special devices keep noise to a minimum.

**Noise Level:**

Excellent insulation and special devices keep noise to a minimum.

**Noise Level:**

Excellent insulation and special devices keep noise to a minimum.

**Noise Level:**

Excellent insulation and special devices keep noise to a minimum.

**Noise Level:**

Excellent insulation and special devices keep noise to a minimum.

**Noise Level:**

Excellent insulation and special devices keep noise to a minimum.

**Noise Level:**

Excellent insulation and special devices keep noise to a minimum.

**Auto 40°- 50°:**

The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.

**Auto 45°- 65°:**

The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.

**AUTO 60° - 70°:**

The auto program regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.

**Auto 60°:**

Program Auto 60 ° is designed for heavily soiled mixed dishes.

**FLEXITABS:**

Flexitabs adjusts the wash cycle to give the best possible results regardless of the type of detergent used.

**CRYSTAL:**

The crystal cycle is a particular programme designed especially for delicate dishes with light dirt.

**DELAY TIMER:**

The delay timer can postpone the start of the program by up to 24 hours.

**RAPID 27 MINS:**

The rapid 27 mins quick program takes just 27 minutes to wash a load.

**STRONG & FAST:**

This special programme takes less than 1 hour to eliminate the most stubborn dirt and dried on residues.

**Eco:**

Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.

**1/2 load:**

This program is designed for washing dishes not heavily soiled with partial load of the dishwasher.

**Normal programme:**

The normal programme is suitable for normal degrees of dirt for everyday use.

**Dish warming:**

Dish warming, this cycle is for clean dishes that provides a final hot rinse to make it possible for the dishes to be dried and then used immediately for serving hot food.

**Super:**

The super programme is suitable for removing stubborn dirt.

**Swing Wash System:**

The Swing Wash system ensures optimum water distribution throughout 45cm dishwasher tanks to deliver excellent wash results.

**Delicate:**

Delicate washing program is designed for delicate dishes which are not heavily soiled.

**Delicate Quick:**

Program Delicate Quick is suitable for quick washing of delicate dishes.

**Normal Quick:**

Program Normal Quick is suitable for quick washing of mixed dishes, for everyday use.

**Daily:**

The ideal programme for everyday dishes without stubborn dirt or dried on residue.

**Daily Quick:**

The daily program is suitable for quick daily washing of dishes.

**Eco:**

Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.

**Quick Time:**

The Quick Time option can reduce the length of the wash cycle up to 55%.

Hyclean:

When the HYCLEAN option is selected, the dishwasher performs a final 10 minute rinse at a high temperature of 70°C, eliminating virtually all bacteria to achieve the highest possible standards of cleanliness. The Hyclean option can be selected with almost all cycles at temperatures above 50°C.

**Ultraclean:**

The Ultraclean option performs a final rinse at a high temperature of 70°C eliminating virtually all bacteria.

**FlexiZone:**

The 1/2 load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.

**ORBITAL WASH SYSTEM:**

Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.

FlexiDuo:

The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.

**AQUATEST:**

Aquatest measures the clarity of the water during an auto program, and automatically ensures the minimum consumption of water and energy.

**ACTIVE LIGHT:**

Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.

**Acquastop:**

Some Smeg dishwashers are equipped with a simple Acquastop: float sensor in the bottom which is necessary to prevent an accidental leakage of water inside the appliance.

**Acquastop:**

Some Smeg dishwashers are equipped with a simple Acquastop: float sensor in the bottom which is necessary to prevent an accidental leakage of water inside the appliance.

Total acquastop:

Most models of Smeg dishwashers are equipped with Acquastop Totale, which allows to avoid flooding as a result of water leakage. The system consists of a float sensor, disposed under the inner chamber of a dishwasher, which blocks water supply inside the appliance in case of water leakage into the lower tray. An additional electromagnetic valve on the water inlet hose also automatically blocks water supply if detecting water leakage in the hose. For Laundry: Total acquastop, the product is built with 3 levels of anti-flood devices to ensure protection against water leakage. For Laundry: Total acquastop, the product is built with 3 levels of anti-flood devices to ensure protection against water leakage.

**Professional:**

Option Professional enables to convert household appliances into semiprofessional ones due to the programs which significantly reduce washing time to obtain an astonishing 16 minutes cycle.

**Enersave:**

At the end of the drying cycle a special device slowly automatically opens the door a few centimeters, to ensure perfect drying and to save up to 20% of energy on some models.

**Rompi-goccia:**

Some models of dishwashers are equipped with special polymer nozzles Rompi-Goccia, that improve the process of drying.

**EasyGlide:**

Convenient EasyGlide system for easy unloading of the appliance that allows reaching maximum flexibility of load of the machine.

**Glass PRO:**

The glass PRO program is dedicated to wash glasses.

**Ultra Rapid:**

The program is specifically for Ultra Fast wash very quickly (16 min.). Pots and pans very dirty, even with dried residues.

**IntensivoProf:**

The Intensive program is recommended for heavily soiled pots and pans and dry residues to be washed quickly.

**Soak programme:**

The soak programme provides a rinse to prevent dirt from drying.

**UniversaleProf:**

The Universal program is suitable for washing normally soiled tableware, even with little residue dried.

**Installation in column:**

Installation in column
