

ST733TL

DISHWASHER, BUILT IN FULLY INTEGRATED, 13 PLACE SETTINGS, 60 CM, 82 CM HEIGHT, ENERGY RATING A+++

EAN13: 8017709173296

- 13 place settings
- Number of programs: 6 + 4 quick programs
- Orbital washing system
- Energy saving option EnerSave A+++
- Buffer memory
- Display: Delayed start display, Program duration display, Time to end display
- Delay timer option up to 24 hours, with automatic soak
- Visual indicator: salt and rinse aid
- Varied distribution 1/2 load option FlexiZone
- Grey baskets
- Height adjustable upper basket on three horizontal levels
- Upper basket with central fixed racks
- Upper basket with EasyGlide System
- Lower basket with double foldable racks
- FlexiDuo, third upper basket for cutlery
- 13 place setting sliding cutlery basket
- Lower basket with anti-drop insert
- Blue led internal lights
- Single hot/cold water max 60°C alimentation - energy save up to 35%
- Annual water consumption: 2520 l/year
- Annual energy consumption: 230 kWh/year
- Noise level: 44 dB (A) RE 1 pW
- Current: 10 A
- Frequency: 50 Hz
- Voltage: 220-240 V



Functions





Plus and Options



A+++:

Appliances with this symbol can reduce energy consumption by a further 30% from the standard A energy rating.



13 plate settings:

The symbols show the number of plate settings of the dishwasher.



ORBITAL WASH SYSTEM:

Orbital wash system distributes water evenly throughout the 60cm dishwasher cavity, directing water with precision to ensure an excellent wash.



DELAY TIMER:

The delay timer can postpone the start of the program by up to 24 hours.



FlexiZone:

The 1/2 load flexizone allows you to wash a reduced load saving energy, water and time and there are no restrictions on where the items are placed.



Enersave:

At the end of the drying cycle a special device slowly automatically opens the door a few centimeters, to ensure perfect drying and to save up to 20% of energy on some models.



Quick Time:

The Quick Time option can reduce the length of the wash cycle up to 55%.



ACTIVELIGHT:

Activelight is an led light which projects a red spot onto the floor beneath the dishwasher when the appliance is in use.

Total acquastop:

Most models of Smeg dishwashers are equipped with Acquastop Totale, which allows to avoid flooding as a result of water leakage. The system consists of a float sensor, disposed under the inner chamber of a dishwasher, which blocks water supply inside the appliance in case of water leakage into the lower tray. An additional electromagnetic valve on the water inlet hose also automatically blocks water supply if detecting water leakage in the hose. For Laundry: Total acquastop, the product is built with 3 levels of anti-flood devices to ensure protection against water leakage. For Laundry: Total acquastop, the product is built with 3 levels of anti-flood devices to ensure protection against water leakage.



AQUATEST:

Aquatest measures the clarity of the water during an auto program, and automatically ensures the minimum consumption of water and energy.



FlexiDuo:

The FlexiDuo 3rd cutlery basket allows you to arrange cutlery or small cups, ladles, or bulky utensils however you like: it consists of two separate and moveable modules.



EasyGlide:

Convenient EasyGlide system for easy unloading of the appliance that allows reaching maximum flexibility of load of the machine.



FLEXITABS:

Flexitabs adjusts the wash cycle to give the best possible results regardless of the type of detergent used.



WATERSAVE:

System WaterSave ensures the best washing results with minimal water consumption depending on the model of dishwasher.



Noise Level:

Excellent insulation and special devices keep noise to a minimum.

Programs

**Soak programme:**

The soak programme provides a rinse to prevent dirt from drying.

**Eco:**

Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.

**Delicate:**

Delicate washing program is designed for delicate dishes which are not heavily soiled.

**Super:**

The super programme is suitable for removing stubborn dirt.

**Auto 45°- 65°:**

The auto programme regulates the length of a cycle depending on the need for a pre-wash and the number of rinses required.

**RAPID 27 MINS:**

The rapid 27 mins quick program takes just 27 minutes to wash a load.

**Eco:**

Eco, this economic wash programme uses a low amount of water and energy in order to provide the most environmentally friendly cleaning option.

**Normal Quick:**

Program Normal Quick is suitable for quick washing of mixed dishes, for everyday use.

**Delicate Quick:**

Program Delicate Quick is suitable for quick washing of delicate dishes.

**STRONG & FAST:**

This special programme takes less than 1 hour to eliminate the most stubborn dirt and dried on residues.

